



Passion for Laminate Floors

Installation Instruction



www.topdeckflooring.com.au

PANTORA LAMINATE FLOOR Amor Collection

Congratulations and thank you for choosing Pantora laminate flooring!


We do our best to guarantee product quality when it's in our duty of care. Once it leaves our warehouse it's up to the 'customer' and the 'installer' to verify the condition of the product before or during installation as stated in our warranty. During installation the floorboards are cut and hit into place & some boards will suffer chips and scratches. This is why there is always wastage factored in all flooring installations. It's important for the customer and installer to share the responsibility & check the product and not to use any damaged product in the installation.

Quick Guideline

- Floating floor installation only, not to be glued or nailed to the subfloor.
- Check the product matches what was ordered.
- Check the condition of the subfloor surface for flatness and planeness.

Refer to the Horizontal surfaces diagram.

Any deviations greater than 4mm over a 2 m radius as in A. B. C. must be corrected either by grinding the humps or using levelling compound to fill the low spots.

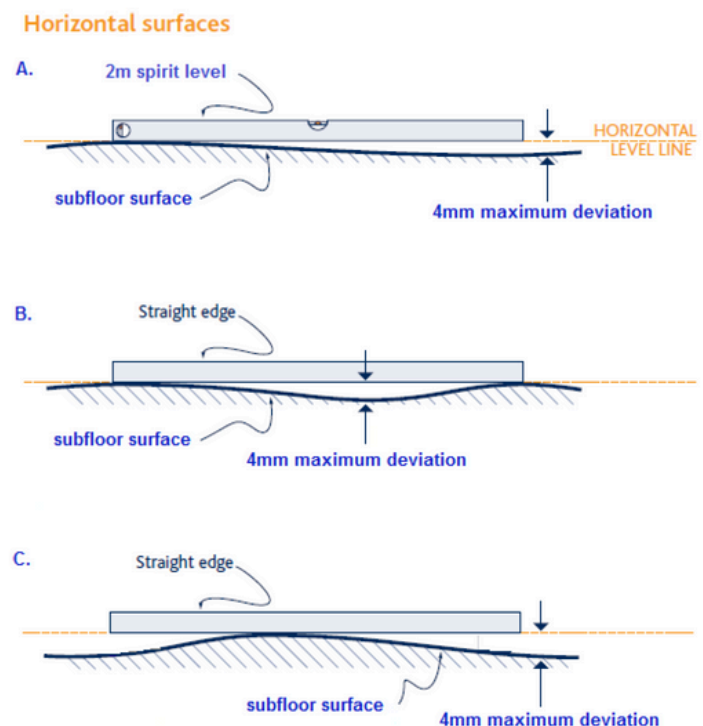

- Choose the best direction for the flooring to be installed, consider major light source, length and width of rooms.
- Work from a few boxes to mix in the desired patterns in the layout.
- Allow for expansion gaps around the perimeter of 8-10mm, & a maximum of 15 metres in the width of the plank and 18 metres in length of the plank will require expansion and transmission joins to assist with the natural movement of a floating installation with an extra expansion gap of 1mm for every metre there on.
- Tapping blocks and pull bars are advised but never directly strike the board with a hammer or rubber mallet.

MAINTENANCE & CARE GUIDE MAIN POINTS

Prime laminate flooring can be cleaned with just a cloth, mop, broom or vacuum. When cleaning, make sure the cloth or mop is damp, **but NEVER soaking wet. NEVER** use a Steam mop, this will damage the floor and void the warranty. Surface dirt can be easily removed with a cloth or vacuum. Scuff marks and difficult stains can be removed just as fast and easily, simply wipe with a damp cloth. Please note that the cloth should be wrung out before wiping. In high-traffic areas with lots of dirt, such as entryways, mats will help to protect against abrasions. Furniture legs should be protected with felt pads to guard against scratching. Note that you can void your warranty should you not use felt pads. Standing water should be avoided at all costs. Take extra caution in areas with flowerpots, vases, and near water faucets. If you use any cleaning agents while cleansing the floor, make sure that all residues are removed.

The following cleaning agents are not suited for cleaning laminate flooring:

- Waxes
- Bleach
- Strong Solvents
- Abrasive polish that can damage the surface coating

INSTALLATION INSTRUCTIONS

I. BEFORE YOU START/ PREPARATIONS

**PLEASE READ ALL THE INSTRUCTIONS BEFORE YOU BEGIN THE INSTALLATION.
IMPROPER INSTALLATION WILL VOID WARRANTY.**

IMPORTANT NOTICE

All wood based products, even those specifically designed to have increased resistance to moisture, are hygroscopic (they will react to the moisture in the environment) and as a result will expand or contract accordingly. All sources of under floor moisture must be rectified prior to the installation of the floor. Any construction dampness must be completely dry. Although this product has been designed with bathroom installation in mind it is not waterproof and excessive wetting is to be avoided and water spillages dried immediately. It is important that you check each plank for any manufacturing defects. Any faults must be reported back to the store of purchase for an immediate refund or replacement prior to the flooring being installed.

- Calculate the room surface prior to installation and plan an extra 10% of flooring for waste.
- Inspect your subfloor before you begin. It must be clean, dry.
- If this flooring is intended to be installed over an existing wooden floor, it is recommended to repair any loose boards or squeaks before you begin installation.
- With a floating floor you must always ensure you leave a 1cm (1/2") gap between walls and fixtures such as pipes and pillars, stairs, etc. (Tip: When installing around pipes, drill the holes 20 mm (3/4") larger than the diameter of the pipes.)
- A vapor barrier to be installed over concrete substrates. In the case installation is done over a wood substrate on or below grade a vapor barrier must be installed if there is not a vapor barrier existing in a well-ventilated crawl space. A minimum 0.15mm (6 mil) plastic poly sheeting should be used as a moisture barrier.
- Relative Humidity Levels of your room is recommended to be maintained at 40-65 % at 18-24 °C (65" - 75°F).
- Decide the installation direction. It is recommended to install the length direction of the planks parallel to the main light direction.
- Measure the area to be installed: The board width of the last row shall not be less than 50mm (2"). If so, adjust the width of the first row to be installed. When measuring, take the free gap requirement of about 10mm (1/2") of the floor perimeter into account. In narrow hallways, install the floor parallel to the lengthways.

- Inspect your laminate flooring. No claims on surface defects will be accepted after installation.
- Due to the speed of sudden temperature changes, which has the potential to negatively affect laminate flooring construction, it is not recommended to install over any electrical radiant heating system.
- Installation over electrical radiant heating systems will not be covered by the manufacturer's warranty. Below instructions are for radiant heating systems using water.
- Ensure the radiant heat surface temperature never exceeds 27°C (81°F). Before installing over newly constructed radiant heat systems, operate the system at maximum capacity to force any residual moisture from the cementitious topping of the radiant heat system. The maximum moisture content of the screed is 1.5% (CM method). Shut down the floor heating at least 48 hours prior to installation. Make sure that the temperature in the room is at least 15°C (60 °F) during installation. It is recommended that the radiant heat be applied in a gradual manner after installing the laminate floor. Refer to the radiant heat system's manufacturer recommendations for additional guidance.

TOOLS AND SUPPLIES REQUIRED


- FOAM UNDERLAY (IF NOT PRE-ATTACHED) • SPACERS • SAW • ADHESIVE TAPE
- 4MIL (OR THICKER POLYURETHANE VAPOR BARRIER FOR CRAWL SPACE AND CONCRETE FLOOR INSTALLATIONS. • RUBBER Mallet • RULER • PENCIL • TAPE MEASURE • UTILITY KNIFE • CONSTRUCTIONS ADHESIVE

FOR BATHROOM, LAUNDRY ROOM OR COMMERCIAL INSTALLATIONS


It is important to seal any cut planks to ensure superior and warranted performance. When a flooring plank is cut to fit (either end cuts or side cuts), a sealant is always required around the perimeter of the installation.

- Once the flooring installation is completed, a general Silicone based sealant should be applied around the perimeter (in the expansion space at walls). This should also include any other areas such as islands, doorways, columns, etc. where the laminate flooring planks have been cut to fit.
- Branded and generic Silicone tubes are available and any local home center or hardware location.


INSTALLATION GUIDELINE

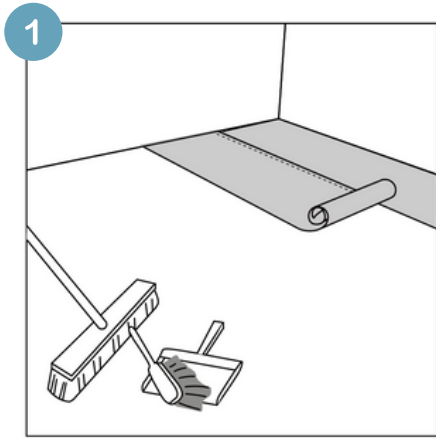


- After thoroughly cleaning the subfloor, you must install a foam underlay (unless your product has a pre-attached pad). Run the foam underlay in the same direction as the flooring planks. The underlay should be butted side-by-side with no overlap. Tape seams together. If you are installing over a concrete subfloor, a 6-mil poly (plastic sheeting) is to be installed under the foam underlay. (Many foam underlays already have this plastic sheeting pre-attached).

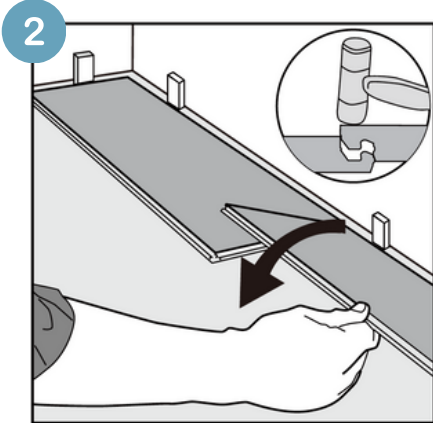

- Begin laying in the left-hand corner. Place the floorboard 10mm (1/2") from the left wall. Use spacers between the wall and the floorboard.
- Second Plank, first row. Drop the plank and gently press down the end with a rubber mallet so it firmly locks into the previous plank until both are at the same height.
- Make sure both planks are perfectly aligned.
NOTE: If you notice both planks aren't at the same height or are not well locked together, please follow the disassembling instructions at the bottom of the page, disassemble and check if any debris stuck inside the lock is obstructing.

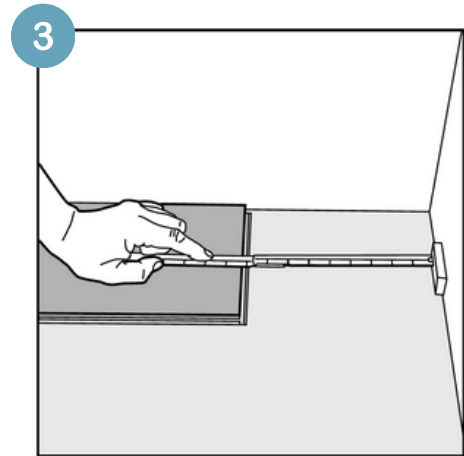


- At the end of the first row, leave an expansion gap of 10mm (1/2") to the wall and measure the length of the last plank to fit.

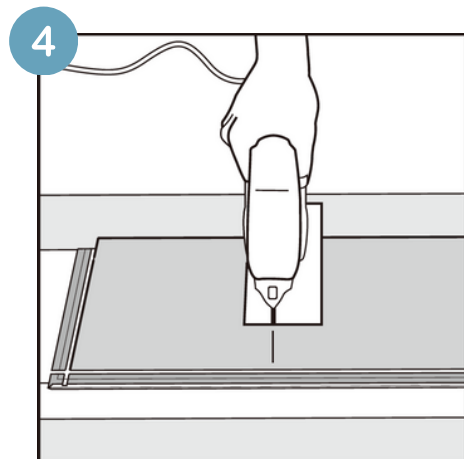


- If cutting with a jig saw, the laminate surface should be turned down. If cutting with a hand saw, the laminate surface should be face up.


INSTALLATION GUIDELINE

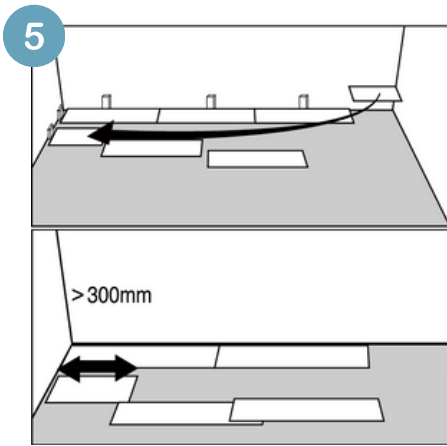


- Start the second row with the leftover cut part of the last plank of the previous row. This small plank should measure at least 30cm (12"). Otherwise, use another plank that should be cut in two. At any case, the short sides cut are distant from at least 30 cm (12").

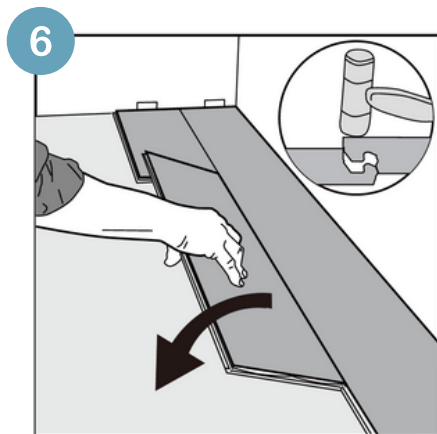

- Clic the long side of the plank into the previous row and place it tight to the short end of the previous plank.
- Drop the plank and gently press down the end with a rubber mallet so it firmly locks into the previous plank until both are at the same height. Make sure both planks are perfectly aligned and locked into the previous row leaving no gap (refer to "Helpful Hint" at the bottom of the page).
- **NOTE:** If you notice both planks aren't at the same height or are not well locked together, please follow the disassembling instructions at the bottom of the page, disassemble and check if any debris stuck inside the lock is obstructing.

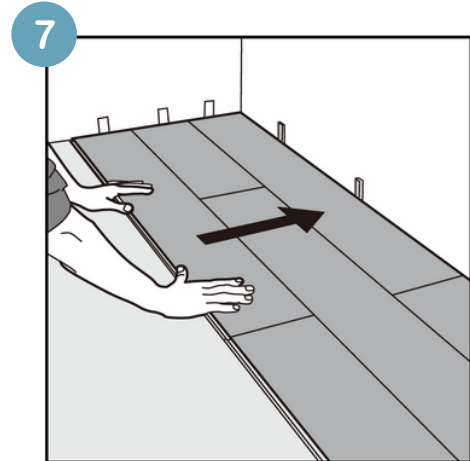


- After 2-3 rows. Adjust the distance to the front wall by leaving an expansion gap of 10 mm (1/2"). Always ensure that the end joints are staggered at least 30cm (12"), both when in the same row as when from one row to the next one.

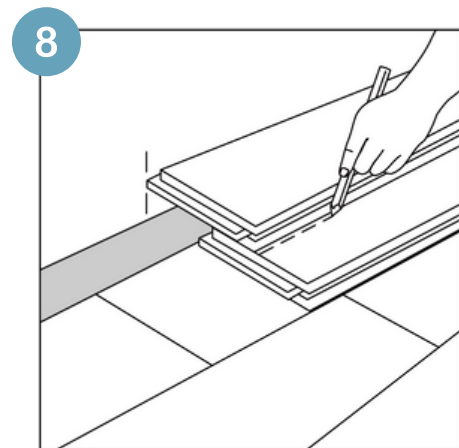


- To lay the last row: position a loose board exactly on top of the last row laid. Place another board on top, with the tongue side touching the wall. Draw a line along the edge of this boards, to mark the first board. Cut along the edge of this board to mark the first board. Cut along this line to obtain of the required width. Insert this cut board against the wall. The last row should be at least 50 mm (2") wide. The spacers can then be removed.

9

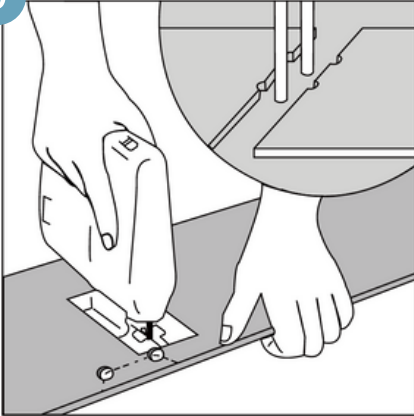

- Holes for pipes: measure the diameter of the pipe and drill a hole that is 20 mm (7/8") larger. Saw off a piece as shown in the figure and lay the board in place on the floor.
- Then lay the sawed-off piece in place.

HELPFUL HINT / CONSEJOS CLAVE

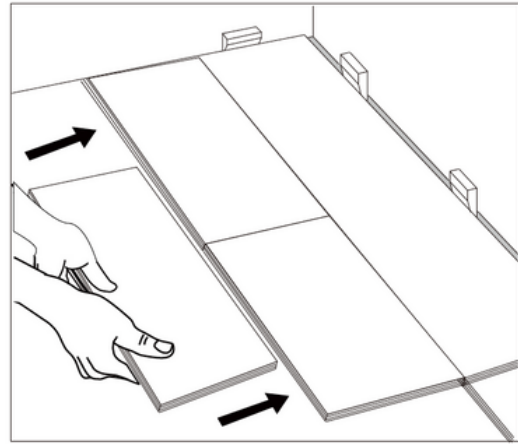


When installing each new row, take a full loose plank and use the long side to tap against the prior row to ensure no gapping.

10



- Door molding and skirting: lay a board (with the decorative side down) next to the door molding and as shown in the figure. Then slide the floorboard under molding.

DISASSEMBLING / DESMONTAJE

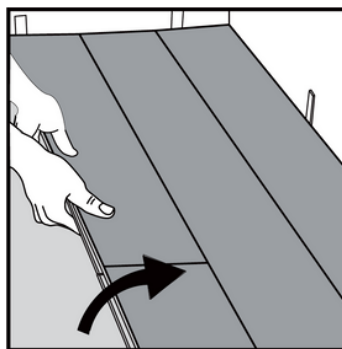

Separate the whole row by lifting it up delicately at an angle. To separate the planks, leave them flat on the ground and slide them apart.